

20" MODEL W-W GRINDER/SHREDDER

FOR GRAVELY TRACTORS

UNPACKING, ASSEMBLING, AND OPERATING INSTRUCTIONS

SHIPPING CONTENTS

Unpack and find all the following items in your shipment

1. Grinder Unit Complete with following installed
 - a. BC 3,8 Sheave installed on cylinder
 - b. Screen installed with two rods
 - c. Rod Retainer Plate
 - d. Belt Guard installed with straps
 - e. Wing nuts
 - f. Hopper Slide
 - g. Hopper Back attached in hopper
2. Grinder mounting frame and (1) Swivel wheel, with PTO mounting frame attached to include frame pin with snap pin.
3. Box Containing the following:
 - a. PTO Sheave BC 9.0, plus allen wrench
[REDACTED]
 - c. (2) Grinder/Frame Pads
 - d. Packet containing factory guarantee and operating instructions.
 - e. (4) rods and (6) rollers
 - f. (2) Frame legs
[REDACTED]
 - h. Following items in bags:
 1. (2) Leg support fasteners
[REDACTED]
and nuts.
[REDACTED]
 4. (2) 1/2" Frame Wing Nuts and Washers

If there is either any damage or missing parts noted, notify both the shipping agent and the W-W Grinder Corporation.

INSTALLATION OF GRINDER UNIT ONTO THE TRACTOR

Take out the four bolts on the front drive of the tractor, and take out the stock Gravelly drive. Replace with a new gasket and your new Gravelly PTO shaft (#15605E1 at any Gravelly dealer). After splining the PTO into the tractor, place the PTO pad over the PTO, which is in your shipment. Place the PTO/Tractor mounting frame over the PTO and PTO pad with the short leg (pipe welded on) of the angle up. Line up the four PTO holes and bolt together using the four bolts sent in your shipment (1/2" x 1-1/2"). Mount the BC 9.0 Sheave onto the PTO Shaft using the key provided. Do not tighten the set screws yet. Place the two frame legs in the pipes on the back sides of the grinder frame. (the plates of these legs down). Use leg support fasteners from box to fix in place. Set the grinder frame up using the nose wheel and tractor and PTO with the Grinder frame.